



STEAM AND VACUUM

SV-100



Accessories





SV-100 Steam and Vacuum

Congratulations on the purchase of your new Sauber Steam and Vacuum cleaner. There are many useful features built into your cleaner. We recommend that you carefully read this instruction manual for the best results.

- | | |
|---|--|
| A Steam Trigger | I Rod |
| B Power Cord | J Control Panel |
| C Vacuum Function On/Off Button | K Clean Water Tank |
| D Steam Function On/Off Button | L Clean Water Tank Release Button |
| E Air Outlet | M Dust Canister Release Button |
| F Mop Pad Holder Unlock Button | N Dust Canister |
| G Handle | O Cleaning Head Release Button |
| H Steam Trigger Lock/Unlock Button | P Cleaning Head |

Accessories:

- Q** Mop Pad x 2
- R** Carpet Glider
- S** Wall Mounting Kit

Specifications:

Adapter Input: 240VAC 50Hz

Total Power: 1700W

Steam Power: 1200W

Vacuum Power: 500W

Dust Bin Capacity: 500ml

Water Tank Capacity: 410ml

Net Weight: 5.7kg

Please contact Sauber Customer Service Australia on 1800 728 237 or New Zealand on 0800 282 288 to find your local spare parts provider.



Before You Begin

This cleaner must be operated in accordance with these instructions and used only for domestic household cleaning. This cleaner is not fit to be used as an industrial cleaner and will void the manufacturer's warranty if used inappropriately.

Please read the manual before operating cleaner

This will ensure you obtain full benefit from your new cleaner. Keep this Instruction Manual in a convenient and safe place for future reference.

Important

Always switch the machine off and remove the plug from the electricity supply before cleaning your appliance, when not in use, or attempting any maintenance task. This cleaner should only be used for its intended purpose as described in these instructions.

Precautionary measures:



1. **Do not** operate the vacuum cleaner too close to heaters, radiators, and other hot surfaces.



2. Before inserting the power plug into the power supply, make sure your hands are dry.



3. Before turning on the vacuum cleaner, remove any large objects from the floor or cleaning surface in order to prevent damage to the filter.



4. When removing the power plug from the power supply, **do not** pull the power cable, gently pull the power plug from the power supply.

IMPORTANT! Always switch off the cleaner and remove the power plug from the electricity power supply before cleaning your appliance, when not in use or attempting any maintenance task. The cleaner must only be connected to an AC power supply at the voltage shown on the rating label. This cleaner should only be used for its intended purpose as described in this instruction manual. Never operate the vacuum cleaner without filters.

When using your cleaner, basic precautions should always be observed, including the following;

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Always check the power cord before use, the power cord and the plug should be in a good condition and must not be damaged. If the power supply cord is damaged or defective, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
3. Do not leave appliance unattended when plugged in. Unplug from outlet when not in use and before conducting maintenance, cleaning or troubleshooting.
4. To prevent electric shock, do not use outdoors. The steam cleaner is intended for household use only.
5. Children shall be supervised to ensure that they do not play with the appliance.
6. Do not operate the unit while in any one stationary position for any period of time. Keep the unit moving while in operation.
7. Use only as described in this manual. Use only manufacturer's recommended attachments.
8. Do not pull or carry by the power cord, do not use cord as a handle, do not close a door on the power cord or pull the power cord around sharp edges or corners.
9. Keep the power cord away from heated surfaces.
10. Do not run the steam cleaner over the power cord.
11. Do not unplug by pulling on the power cord. To unplug, grasp the plug, not the power cord.
12. Do not use an extension cord.
13. Do not handle plug or appliance with wet hands.
14. Do not use steam cleaner if it has been dropped, damaged, left outdoors or immersed into water. Return it to the nearest service centre.
15. Turn off all controls before unplugging. Always remove the power cord from the outlet and handle the steam cleaner with care when filling the water tank with water.
16. Do not over fill the water tank.
17. Do not use without the water tank cap in place. Check that the water tank cap is completely closed before use.

18. Do not operate without water in the water tank.
19. Do not fill the water tank with anything other than water. Never put additives (such as perfume disinfectant, eucalyptus oil, stain remover or products containing alcohol) in the water as they may damage the steam cleaner or make it dangerous to use.
20. Empty the water tank after every use when the steam cleaner is not in use.
21. Do not touch any hot areas on the steam cleaner. It is normal for the steam cleaner to heat up during operation.
22. The force and heat of the steam may have an adverse effect on some materials. Always test the steamer on a small concealed area to determine if it is suitable for treatment.
23. Accessories become hot during use. Allow them to cool down before handling them.
24. Use only manufacturer's recommended attachments – use of attachments not provided or sold by us may cause fire, electric shock or injury.
25. Never point or aim the steam cleaner at people, animals or plants (risk of scalding!).
26. Do not aim the steam cleaner at electrical systems or wires.
27. Connecting the steam cleaner to improper voltage may result in damage to the steam cleaner and possible injury.
28. Do not use steam cleaner if there are visible signs of damage or if it is leaking.
29. Do not use on leather, wax polished furniture or floors, synthetic fabrics, velvet or other delicate, steam sensitive materials.
30. Never put aromatic, alcoholic or detergent products into water tank, as this may damage it or make it unsafe for use.

**Before you clean, test first**

Your Sauber Steam and Vacuum cleaner is designed to clean hard flooring such as ceramic tile, vinyl, laminate, marble, stone and sealed hard wood floors. Use of your machine on waxed or some unwaxed floors may result in a diminished gloss.

The machine is not for use on unsealed wood floors. For best results test in an inconspicuous area and check the care instructions from your flooring manufacturer.



Warning: Danger of scalding. Please use with caution when using the steam function. The steam emitted from the machine is very hot.



CAUTION: Surface may be hot. Avoid contact.



Assembly

WARNING! Disconnect the power plug from the power supply before fitting the handle to the rod.

Connecting tube



1. Fitting: Insert the handle into the main body of the machine, press until it locks in place.



2. Removing: Use a screwdriver to push into the hole and pull the handle from the main body.

Connecting cleaning head



1. Fitting: Attach the main body of the cleaner to the cleaner head and press until you hear it click into place.

Important! Please ensure the main body is fully inserted into the mop head until you hear a click sound



2. Removing: Press the button (as shown) and pull the main body from the cleaner head.

Connecting Mop Pad Holder for hard floor cleaning



1. Fitting: Place the machine main body onto the Mop Pad Holder until it locks into position.



2. Remove: Place one foot on the Mop Pad Holder Unlock Button (as shown) and lift up the main unit.

IMPORTANT: Always unplug the cleaner when adding water or changing a Mop Pad.

NOTE: Wash the Textile Pad prior to use to remove any lint.

Connecting carpet glider



1. Fitting: Place the machine onto the carpet glider until it locks into position.



2. Removing: Place one foot on the tab at the back, and pull the main body from the carpet glider.

Instructions For Use

WARNING! Disconnect the power plug from the power supply before filling the water tank. Ensure that the water tank is installed securely into the cleaner before connecting the power plug to the power supply.

Filling the Clean Water Tank



1. Remove water tank:

NOTE: The tube which transfers water from the Water Tank to the boiler is weighed down with a brass ball. This is an intentional design to improve efficiency of water usage. It is normal for this ball to create a rattling sound inside the Water Tank during use.



2. Pull the cap on the Clean Water Tank to open.
3. Fill the Clean Water Tank with cold tap water **ONLY**. Close the cap and make sure no water leaks before you refit the clean water tank.
4. Ensure the Hard Water Filter is in place before you refill the clean water tank.


WARNING! Do not add any cleaning solution, detergent, vinegar or bleach into the water tank. This will cause damage to the cleaner. Do not use hot or boiling water to fill the water tank. Only refill the water tank with cold tap water.



5. Install the Clean Water Tank:



Control panel description

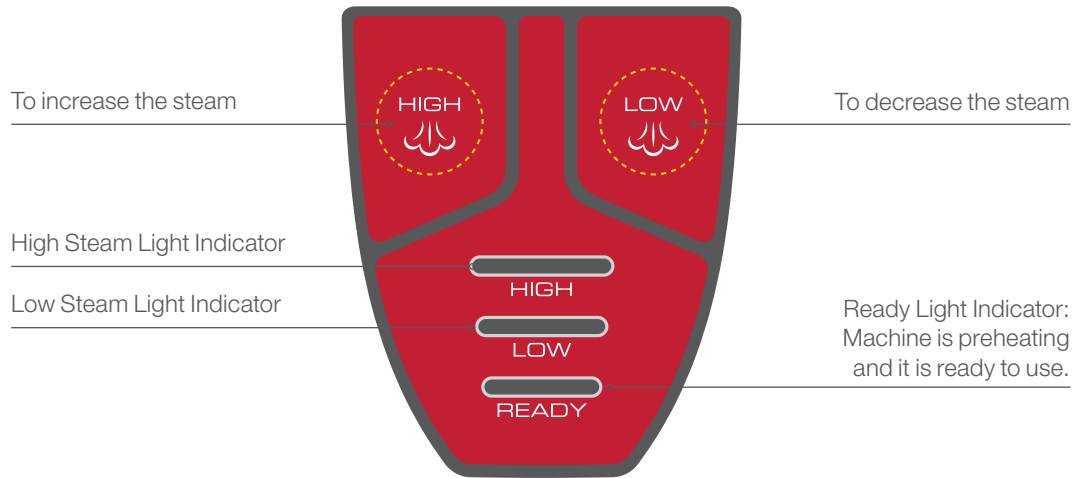



Steam cleaning hard floors

IMPORTANT! Do not use the cleaner without a Mop Pad attached to the Cleaner Head. Do not use the Carpet Glider when cleaning hard floors.

WARNING! Unplug the steamer and let the steamer cool down before you change the accessory.

Do not leave the appliance on and in the upright position unattended.



1. To remove the Carpet Glider, place one foot on the tab at the back, and pull the main body from the carpet glider.



2. Turn the cleaner on, and activate the steam function by pressing the Steam Function On/Off Button. The Ready Light Indicator will flash for 30 seconds to indicate that the machine is heated up.



3. When the Ready Light Indicator stops flashing, the machine is ready to be used. Press the Steam Trigger Unlock Button and the Steam Trigger at the same time to release steam.



4. You can use the steam function and the vacuum function at the same time, you only need to press on the Vacuum Function On/Off Button.



Steam cleaning carpets



1. When using the cleaner on carpet, please ensure that a mop pad and the carpet glider are attached.
2. When you are finished cleaning, press the Steam Function On/Off Button once to switch off the cleaner.

Switching on the vacuum function



1. Press on the Vacuum Function On/Off Button to switch on and press again to switch off.

Empty the Clean Water Tank



1. Unplug the cleaner from the main power and ensure the unit has cooled.
2. Remove the Clean Water Tank from the main body of the cleaner.
3. Open the Clean Water Tank cap.
4. Empty any excess water from the tank.
5. Replace the cap and reassemble to the cleaner.

Empty the Dust Canister



1. Remove the Dust Canister from the cleaner by pressing the Dust Canister Release Button and pull out the Dust Canister.



2. Lift up the filter and empty the dust from the Dust Canister.



3. Unlock the HEPA Filter Cap by turning anti-clockwise.



4. Clean the HEPA Filter regularly to maintain the suction performance.



5. Place the HEPA Filter back and lock the HEPA Filter Cap.
6. Insert the Dust Canister into the cleaner until it locks in place.

Maintenance

IMPORTANT! Always remove the power plug from the power socket before performing any maintenance.

Replacing the Hard Water Filter

The cleaner is fitted with a Hard Water Filter. If you live in an area of hard water the filter will discolor over time. Depending on the water hardness and frequency of use, the filter should be changed every 6 months.



1. Unplug the cleaner from the main power and ensure the unit has cooled. Remove the clean Water Tank from the main body of the cleaner.



2. Take out the Hard Water Filter.
3. Insert a new Hard Water Filter and the Clean Water Tank to your cleaner.

Retrieving and cleaning the Mop Pad




1. Unplug the cleaner from the main power and ensure the unit has cooled.
2. Press one time on the Mop Pad Holder Release Button, and lift the main cleaner to take out the Mop Pad Holder.
3. Wash the Mop Pad in a washing machine with a mild detergent at max temperature 40°C. Ensure the Mop Pad is dry before putting it back on the Mop Pad Holder.



Cleaner storage



1. Fix the wall hook by using a screw driver (not provided) and the three screws (supplied).

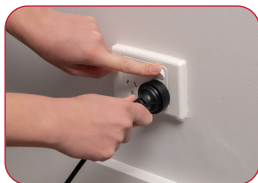

2. Unplug the cleaner from the power outlet whilst stored.



3. Neatly tie the cord onto the Cord Holder.



4. Place the back of the appliance into the hook.



Troubleshooting

Problems and Solutions

If you come across a problem, please use the checklist of troubleshooting tips before ringing Sauber Customer Service Australia on 1800 728 237 or New Zealand on 0800 282 288.

Fault	Solution
The steamer will not switch on.	<ul style="list-style-type: none">- Check the steamer is plugged in- Plug the steamer into a different socket
The steamer will not produce steam.	<ul style="list-style-type: none">- Check the Hard Water Filter is assembled- Check there is enough water in the Clean Water Tank
Water comes out from the back of the machine.	<ul style="list-style-type: none">- Check there is no blockage from the accessory tool and mop head
The steamer leaves too much water on the floor	<ul style="list-style-type: none">- Replace mop pad with a dry one- Use less detergent in the detergent tank



Spare Parts

Part	Part Number
Hard Water Filter	32201756
Clean Water Tank	33156384
Mop Pad	31400290
Carpet Glider	31155597
Dust Canister	33156385
Dust Canister Filter	32201757



1 Year Warranty STEAM AND VACUUM



Your cleaner, in the case of domestic use, has one year parts and labour warranty against product defects and failures when the product is used in accordance with the terms and conditions of this warranty statement.

This warranty commences from the original date of purchase and is not transferable; please retain your original proof of purchase for any warranty claims. This warranty is valid only in the country where the cleaner is purchased.

The cleaner must be operated in accordance with these instructions and used only for domestic household cleaning to remove DRY dirt and dust from household carpets, flooring and fabrics. This cleaner is not fit to be used as an industrial cleaner, and is not designed for the collection of vitreous building material including particle board, construction products and similar products such as wood/fibres, cement, fillers, fibre glass etc or excessive or frequent sand. The infrequent pick-up of these materials in these circumstances may be harmful to your cleaner and may void the manufacturer's warranty.

Accessories and consumables including filters, unless defective in manufacture, are not subject to this warranty. In order to prolong the life of accessories and consumables, regular care and maintenance is recommended.

When properly used and cared for, your cleaner will render excellent service; refer to the instruction manual for further details, as misuse or failure to follow the instructions makes this warranty void.

In the event of service or advice being needed, please contact Electrical Home-Aids Pty. Limited, Level 1, Building 3, Brandon Business Park, 530 Springvale Road, Glen Waverley Victoria 3150, or on 1800 815 270

(AUS) or 0800 282 288 (NZ), Monday-Friday 9am-5pm EST. The decision to repair or replace the cleaner is at the sole discretion of Electrical Home-Aids Pty. Limited. If Electrical Home-Aids Pty. Limited decide to repair or replace the cleaner, it will do so at its own cost.

Electrical Home-Aids Pty. Limited is unable to accept responsibility under this warranty for any repair work not carried out by an authorised Service Agent or from the use of non-genuine parts. If any part is no longer available or manufactured, Electrical Home-Aids Pty. Limited will replace it with a genuine functional replacement part. This warranty does not apply to the cost of replacing any parts of the product due to normal wear and tear, alterations, improper installation, physical abuse, misuse or accidental damage. Any transportation costs involved in the repair of defective parts shall be borne by the claimant.

If proof of purchase cannot be provided at the time of a warranty claim or service, any work carried out on the cleaner is chargeable.

The repair of the cleaner under this warranty does not extend the original period of warranty.

The benefits conferred by this warranty are in addition to all other rights and remedies in respect of the product as outlined under the Competition and Consumer Act and other State and Territory laws.

"Our goods come with guarantees that cannot be excluded in the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure."