

POWERFRESH[®] LIFT-OFF[™]
2-IN-1 STEAM MOP
USER GUIDE

1544 SERIES

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING YOUR STEAM MOP.

When using an electrical appliance, basic precautions should be observed, including the following.

WARNING

ALWAYS CONNECT TO A PROPERLY EARTHED ELECTRICAL SOCKET.

WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:

- » Unplug from electrical socket when not in use and before servicing.
- » This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- » Children should be supervised to ensure that they do not play with the appliance.
- » If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- » Liquid or steam must not be directed towards equipment containing electrical components.
- » The appliance shall not be left unattended while it is connected to the supply mains.
- » The appliance is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
- » Keep the appliance out of reach of children when it is energized or cooling down.
- » The foot surfaces are liable to get hot during use.
- » Do not leave appliance when plugged in.
- » Do not modify earthed plug.
- » To reduce the risk of electric shock: Use indoors only. Do not expose to rain. Store indoors.
- » Do not allow to be used as a toy.
- » Use only as described in this user guide.
- » Use only manufacturer's recommended attachments.
- » Do not use with damaged cord or plug.
- » Do not immerse in water or liquid.
- » If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water; do not attempt to operate it and have it repaired at an authorized service center.
- » Liquid or steam must not be directed towards equipment containing electrical components.
- » Do not pull or carry by cord, use cord as a handle, close door on cord, or pull cord around sharp edges or corners.
- » Do not run appliance over cord.
- » Keep cord away from heated surfaces.
- » To unplug, grasp the plug, not the cord.
- » Do not handle plug or appliance with wet hands.
- » Do not put any object into openings.
- » Turn off all controls before unplugging.
- » Use extra care when cleaning on stairs.
- » Do not use appliance in an enclosed space filled with vapors given off by oil base paint, paint thinner, some mothproofing substances, flammable dust, or other explosive or toxic vapors.
- » Keep appliance on a level surface.

WARNING

SURFACE MAY BE HOT. AVOID CONTACT.



**THIS SYMBOL MEANS
WARNING: DANGER OF SCALDING**

FOR OPERATION ON A 220-240 VOLT A.C. 50/60 HZ POWER SUPPLY ONLY.

This model is for household use only.

SAVE THESE INSTRUCTIONS

 
Thanks for buying a BISSELL steam mop

We're glad you purchased a BISSELL steam mop. Everything we know about floor care went into the design and construction of this complete, high-tech home cleaning system.

Your BISSELL hard floor cleaner is well made, and we back it with a limited two-year warranty. We also stand behind it with a knowledgeable, dedicated Consumer Care department, so, should you ever have a problem, you'll receive fast, considerate assistance.





My great-grandfather invented the floor sweeper in 1876. Today, BISSELL is a global leader in the design, manufacture, and service of high quality homecare products like your BISSELL hard floor cleaner.

Thanks again, from all of us at BISSELL.



Mark J. Bissell
Chairman & CEO


| | |
|--------------------------|-----|
| Safety Instructions..... | 2 |
| Product View..... | 4 |
| Assembly | 5 |
| Operations | 5-7 |
| Maintenance & Care | 7 |
| Guarantee..... | 8 |
| Service | 8 |

| | | |
|---|----------------|---|
|  | WARNING | RISK OF FIRE, ELECTRIC SHOCK, OR INJURY. |
|  | STEAM | DANGER OF SCALDING. |
|  | GUIDE | READ USER GUIDE FOR COMPLETE SAFETY AND USER INSTRUCTIONS. |
|  | WEEE | DO NOT THROW THE APPLIANCE AWAY WITH THE NORMAL HOUSEHOLD WASTE AT THE END OF ITS LIFE, BUT HAND IT IN AT AN OFFICIAL COLLECTION POINT FOR RECYCLING. BY DOING THIS YOU WILL HELP TO PRESERVE THE ENVIRONMENT. |



Product View

- 1 Handle
- 2 Cord Clip
- 3 7.5 Meter Power Cord
- 4 Water Cup
- 5 Easy Touch Digital Controls™ - LO/Hi Steam
- 6 Water Tank with Easy Fill Opening
- 7 EasyScrubber™
- 8 Steam Mop Foot
- 9 Microfiber Mop Pads
- 10 Water Cup
- 11 Carpet Glider
- 12 Fragrance Discs
- 13 Extension Hose
- 14 Window Squeegee
- 15 Flat Surface Tool
- 16 Brass Bristle Brush
- 17 Fabric Steam Tool
- 18 Multi-Purpose Brush - Black
- 19 Kitchen Brushes - Red/Green
- 20 Tool Connector
- 21 Angled Concentrator
- 22 Grout Brush
- 23 Flat Scraping Tool
- 24 Steam Trigger

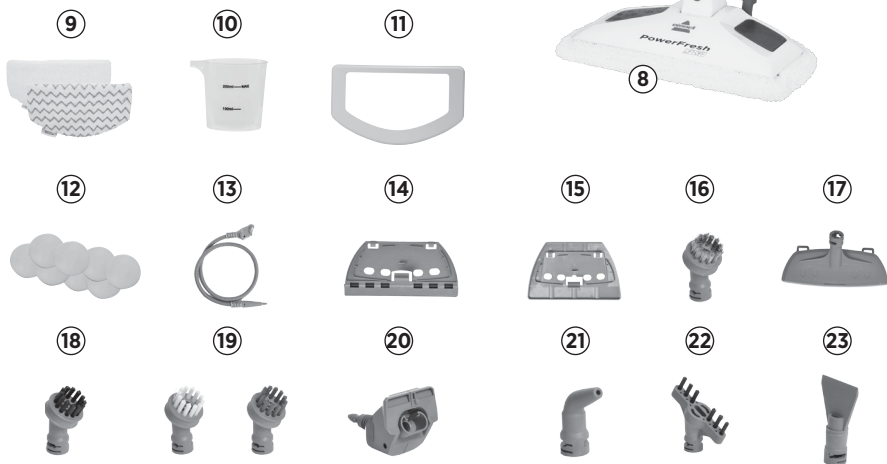

* varies by model

⚠ WARNING
Plastic film can be dangerous. To avoid danger of suffocation, keep away from babies and children.

⚠ WARNING
Do not plug in your hard floor cleaner until you are familiar with all instructions and operating procedures.

⚠ WARNING
To reduce the risk of electric shock, turn power switch off and disconnect polarized plug from electrical outlet before performing maintenance or troubleshooting checks.

Assembly

To assemble the unit

1. Insert the body into the foot until you hear the locking tab click.
2. Insert handle into the top of the body.
3. In the middle hole on the left side on the unit insert the provided screw and tighten.

1.



WARNING

Do not plug in your hard floor cleaner until you are familiar with all instructions and operating procedures.

2.



Operations

Special Features

Easy Touch Digital Controls™

The fingertip power control are located on the front of the Lift-Off™ Pod.

NOTE: On/Off button is to turn ON or turn OFF the steam. Press ON or OFF before choosing HI or LO steam.

(HI) - High Steam Use for durable floors or on sticky messes. To turn steam on, press once. Click again to turn steam off.

(LO) - Low Steam Use on delicate floors or for light, everyday cleaning. To turn steam on, click once. Click again to turn steam off.

NOTE: The “ready” light will blink while the steam mop heats up. The “ready” light will be solid and lit up when heat up is complete. Press the On/Off button first. Then choose HI or LO steam.

NOTE: To turn steam off, press the On/Off button.

Microfiber Mop Pads

Reusable microfiber mop pads are machine washable and safe for virtually all hard floor surfaces. The white microfiber pad is best for everyday use on delicate flooring like sealed hardwoods and laminate. The gray and white striped pad can be used for scrubbing heavily soiled floors and cleaning tougher messes.

NOTE: The type and quantity of pads included varies per model.

Fragrance Discs

Use the fragrance disc with your steam mop to obtain a fresh scent.

Insert the fragrance disc into pocket inside the mop pad. Use the whole disc for a refreshing scent or cut in half for a lighter scent.

Easy Scrubber

(Attached to Mop Head)

Quickly clean sticky messes by lowering the Easy Scrubber with your foot and locking it into position. Clean grout and crevices easily with this effective tool.

WARNING

Exercise extreme care when using your steam mop on hardwood floors. Prolonged application of steam in one area increases the risk of damage to the surface treatment on timber floors. Test steam mop in an inconspicuous area before mopping a large area. The steam mop generates hot steam, so move the unit continuously when cleaning. Regular foot traffic and direct sunlight will wear down timber floor surface treatment, making it more susceptible to steam damage. Check with your timber floor treatment and application specialist prior to steam mop operation.

Tip

» Do not attempt to use your hard floor cleaner on the steam setting without water in the tank. You may hear a knocking sound indicating there is no water.



www.BISELL.com

Operations

Getting Ready

The mop pad may be attached to foot. If not, follow step 1.

1. Attach pad to the mop foot. (Elastic band will secure pad on the foot.)
2. Fill the water tank.
 - a. The water tank opening is located on the side of the water tank. Remove the cover and use water cup to fill. **NOTE: Do not overfill or water may spill. Room temperature water may provide better results.**
 - b. Close the tank cover and press down firmly.
3. Pull and twist the Quick Release™ cord wrap clockwise to unwrap the power cord completely and plug into an outlet as described on the Important Safety Instructions on page 2.

NOTE: Do not use chemicals in the water tank of your Lift-Off™ Steam Mop.

NOTE: Upon the first use of your steam mop or first use after refilling the water tank, the pump may make a 'knocking' sound. This is normal and could last up to 30 seconds.

Using Your Steam Mop

The hard floor cleaner can be used either on hard floors or above the floor using the specialized tools. For best results, vacuum the floor first to clear dust and small debris before using your steam mop.

Your hard floor cleaner is designed to clean hard flooring, such as ceramic tile, vinyl, marble, stone and sealed hard wood floors. Use on waxed or some unwaxed floors may result in a diminished glossiness. The hard floor cleaner is not for use on unsealed wood floors. For best results, test in an inconspicuous area and check the care instructions from your flooring manufacturer.

1. Plug the unit in and wait 30 seconds for it to heat up. The "ready" light will blink while the steam mop heats up. The "ready" light will be solid and lit up when heat up is complete. Press the On/Off button first. Then choose HI or LO steam.

HI (for durable floors or sticky messes) or
LO (for delicate floors or every day cleaning).

NOTE: To turn steam off, press the On/Off button.

NOTE: Press trigger to release the steam.

1a.



WARNING

Tinted plates on foot may get hot while steam mop is in use. Do not touch while hot.

1.



WARNING

Never put descaling, alcoholic, or detergent products into the steam cleaner, as this may damage it or make it unsafe for use.

Tip

» Use of distilled or demineralized water is recommended to prolong the life of your hard floor cleaner.

Using Your Steam Mop Cont'd

- Grasp by steam mop handle and detent to begin mopping.
- Begin cleaning by slowly moving the unit over the floor surface. Moisture on the floor is normal when cleaning.
- When the hard floor cleaner stops emitting steam, put back into upright position, press the On/Off button and unplug. Verify if there is water in the tank. If empty, refill the water tank.

NOTE: To be sure to sanitize an area of your floor, use the microfiber cloth pads and slowly and evenly stroke your steam mop back and forth at least three times over the area using continuous steam. For best results, remove the pad and wash after use.

Using the Lift-Off™ Pod

NOTE: When changing from mopping to hand pod use, press the On/Off button to turn the steam OFF and wait ten seconds.

- Make sure the steam is OFF and wait ten seconds.
- Press the Lift-Off release button and pull the hand pod out by handle.
- With the connector or extension hose attached to hand pod, connect the tool to the opening.
- Turn the tool in order to lock into place.

NOTE: The handheld steam pod will not operate without the proper attachments. You must have the connector or extension hose attached in order for the steam to emit. A safety feature has been designed to prevent steam emission without the connector or extension hose.

NOTE: Make sure to turn the steam OFF before removing or connecting tools and accessories.



CAUTION

When removing the steam pod, built up steam may be released. To avoid possible contact with steam, wait 10 seconds after turning unit off before removing the pod or tools.

Maintenance & Care

Removing All Mop Pads

- Unplug hard floor cleaner from electrical outlet.
- Carefully remove mop pad from the mop pad tray using the Quick Release™ Tab. The mop pad and tray may be hot.
- The mop pad can be machine washed in warm water. Use only liquid detergents. Do not use fabric softeners or bleach. For best results, air dry.

⚠ WARNING

To reduce the risk of electric shock, turn power switch off and disconnect plug from electrical outlet before performing maintenance or troubleshooting checks.

CAUTION

Upright storage of the cleaner with a wet mop pad may result in the formation of white marks on your floor. To remove the white marks, clean area with vinegar.

Consumer Guarantee

This Guarantee only applies outside of the USA and Canada. It is provided by BISSELL International Trading Company BV ("BISSELL").

This Guarantee is provided by BISSELL. It gives you specific rights. It is offered as an additional benefit to your rights under law. You also have other rights under law which may vary from country to country. You can find out about your legal rights and remedies by contacting your local consumer advice service. Nothing in this Guarantee will replace or lessen any of your legal rights or remedies. If you need additional instruction regarding this Guarantee or have questions regarding what it may cover, please contact BISSELL Consumer Care or contact your local distributor.

This Guarantee is given to the original purchaser of the product from new and is not transferable. You must be able to evidence the date of purchase in order to claim under this Guarantee.

Limited Two-Year Guarantee

Subject to the *EXCEPTIONS AND EXCLUSIONS identified below, BISSELL will for two years from the date of purchase by the original purchaser repair or replace (with new or remanufactured components or products), at BISSELL'S option, free of charge, any defective or malfunctioning part or product. BISSELL recommends that the original packaging and evidence of the date of purchase be kept for the duration of the Guarantee period in case the need arises within the period to claim on the Guarantee. Keeping the original packaging will assist with any necessary re-packaging and transportation but is not a condition of the Guarantee.

If for your product is replaced by BISSELL under this Guarantee, the new item will benefit from the remainder of the term of this Guarantee (calculated from the date of the original purchase). The period of this Guarantee shall not be extended whether or not your product is repaired or replaced.

*EXCEPTIONS AND EXCLUSIONS FROM THE TERMS OF THE GUARANTEE

This Guarantee applies to products used for personal domestic use and not commercial or hire purposes. Consumable components such as filters, belts and mop pads, which must be replaced or serviced by the user from time to time, are not covered by this Guarantee.

This Guarantee does not apply to any defect arising from fair wear and tear. Damage or malfunction caused by the user or any third party whether as a result of accident, negligence, abuse, neglect, or any other use not in accordance with the User Guide is not covered by this Guarantee.

An unauthorised repair (or attempted repair) will void this Guarantee whether or not damage has been caused by that repair/attempt.

Removing or tampering with the Product Rating Label on the product or rendering it illegible will void this Guarantee.

SAVE AS SET OUT BELOW BISSELL AND ITS DISTRIBUTORS ARE NOT LIABLE FOR ANY LOSS OR DAMAGE THAT IS NOT FORESEEABLE OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE ASSOCIATED WITH THE USE OF THIS PRODUCT INCLUDING WITHOUT LIMITATION LOSS OF PROFIT, LOSS OF BUSINESS, BUSINESS INTERRUPTION, LOSS OF OPPORTUNITY, DISTRESS,

INCONVENIENCE OR DISAPPOINTMENT. SAVE AS SET OUT BELOW BISSELL'S LIABILITY WILL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

BISSELL DOES NOT EXCLUDE OR LIMIT IN ANY WAY ITS LIABILITY FOR (A) DEATH OR PERSONAL INJURY CAUSED BY OUR NEGLIGENCE OR THE NEGLIGENCE OF OUR EMPLOYEES, AGENTS OR SUBCONTRACTORS; (B) FRAUD OR FRAUDULENT MISREPRESENTATION; (C) OR FOR ANY OTHER MATTER WHICH CANNOT BE EXCLUDED OR LIMITED UNDER LAW.

FOR AUSTRALIAN CONSUMERS ONLY:

OUR GOODS COME WITH GUARANTEES THAT CANNOT BE EXCLUDED UNDER THE AUSTRALIAN CONSUMER LAW. YOU ARE ENTITLED TO A REPLACEMENT OR REFUND FOR A MAJOR FAILURE AND FOR COMPENSATION FOR ANY OTHER REASONABLY FORESEEABLE LOSS OR DAMAGE. YOU ARE ALSO ENTITLED TO HAVE THE GOODS REPAIRED OR REPLACED IF THE GOODS FAIL TO BE OF ACCEPTABLE QUALITY AND THE FAILURE DOES NOT AMOUNT TO A MAJOR FAILURE.

THIS GUARANTEE IS IN ADDITION TO OTHER RIGHTS OR REMEDIES UNDER LAW. NOTHING IN THIS GUARANTEE EXCLUDES, LIMITS OR MODIFIES ANY LIABILITY OF BISSELL WHICH IS IMPOSED BY LAW, OR LIMITS OR MODIFIES ANY REMEDY AVAILABLE TO THE CONSUMER WHICH IS GRANTED BY LAW. TO MAKE A CLAIM UNDER THIS GUARANTEE CONTACT BISSELL AUSTRALIA PTY LTD (DETAILS ABOVE). CONTACT BISSELL PRIOR TO RETURNING ANY GOODS. WHERE AGREED, BISSELL WILL REIMBURSE REASONABLE POSTAGE/HANDLING COSTS (IF ANY) FOR RETURNING GOODS TO BISSELL.

Consumer Care

If your BISSELL product should require service or to claim under our Limited Two-Year Guarantee, please visit:

Website or E-mail:

www.BISSELL.com

For Australian inquiries:

Monday - Friday 8:30am - 4:30pm

BISSELL AUSTRALIA PTY LIMITED

42 Rocco Dr.
Scoresby 3179
Victoria
Australia
Telephone: 1-300-247-735

For New Zealand inquiries:

Monday - Friday 8:30am - 4:30pm
Telephone: 0800-247-735

Replacement parts and accessories are available for purchase. To purchase visit www.BISSELL.com

Visit the BISSELL website: www.BISSELL.com

When contacting BISSELL, have model number of cleaner available.

Please record your Model Number: _____ Please record your Purchase Date: _____

NOTE: Please keep your original sales receipt. It provides proof of the date of purchase in the event of a Guarantee claim. See Guarantee for details.



©2015 BISSELL Homecare, Inc
Grand Rapids, Michigan
All rights reserved. Printed in China
Part Number 160-8467 Rev 12/15 RevA
Visit our website at: www.BISSELL.com