

iVac

ULTRA LIGHT PLUS CORDLESS STICK VACUUM


Ultra Lightweight
Swivel Powerhead
Lithium Performance



Crevice Tool



2-in-1 Cleaning Tool

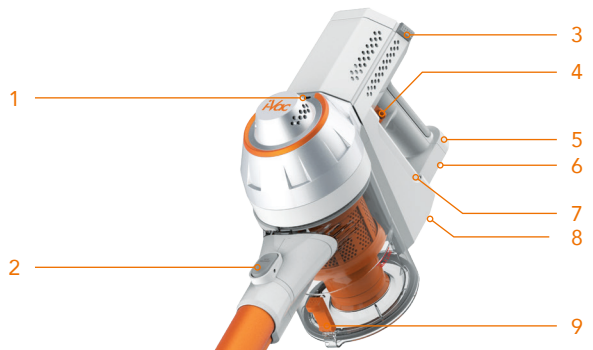

S10 Ultra Light Plus

Congratulations on the purchase of your new i-Vac Stick Vacuum. There are many useful features built into your cleaner and we recommend that you carefully read this instruction manual to take the best advantage of these features.

Features:

1. Charging Indicator
2. Rod Release Button
3. Exhaust Filter Release Button
4. On/Off Button
Continuous Mode Switch (not shown)
5. Charging Port
6. Battery Release Button (not shown)
7. Battery
8. Dust Bin Release Button (not shown)
9. Dust Bin Lid Release Button
10. Power Head Release Button
11. Powerhead Lights
12. Roller Brush Release

Accessories:

13. Charger (not shown)
14. Crevice Tool
15. 2-in-1 Cleaning Tool
16. Wall Storage Bracket (not shown)

Note: Wall mounting screws are not included.

Specifications:

Voltage: 21.6V DC

Power: 130W

Dust capacity: 400mL

Battery type: 2000mAh Li-ion

Please contact Godfreys Customer Care 1800 815 270, NZ 0800 282 288 to find your local spare parts provider.

Before You Begin

This cleaner must be operated in accordance with these instructions and used only for domestic household cleaning to remove DRY dirt and dust from household carpets, flooring, walls and fabrics. This cleaner is not fit to be used as an industrial cleaner and will void the manufacturer's warranty if used inappropriately.

Please read these instructions thoroughly

This will ensure you obtain full benefit from your new cleaner. Keep this Instruction Manual in a handy place for future reference.

Important

Always switch off the appliance before cleaning, when not in use, attempting any maintenance task, fitting or removing accessories. The charger must only be connected to an AC power supply at the voltage shown on the rating label. This cleaner should only be charged with the charger provided. This cleaner should only be used for its intended purpose as described in these instructions.

Precautionary measures:



1. Do not operate the vacuum cleaner too close to heaters, radiators or other hot surfaces.



2. Before inserting the plug into the wall, make sure your hands are dry.



3. Before turning on the vacuum cleaner, safely remove any large objects from the floor or cleaning surface in order to prevent damage to the filter.



4. When you want to remove the plug from the power socket, do not use the power cable, gently pull the plug from the power socket.



5. Do not use this vacuum cleaner to pick-up water or liquids.

Safety Precautions & Warnings

IMPORTANT! Always switch off the appliance before cleaning, when not in use or attempting any maintenance task. The charger must only be connected to an AC power supply at the voltage shown on the rating label. This cleaner should only be used for its intended purpose as described in this instruction manual. Never operate the vacuum cleaner without filters.

Read the manual attentively before using the appliance for the first time.

When using your vacuum cleaner, basic precautions should always be observed, including the following:

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. To prevent electrical shock, do not immerse the appliance, battery, or power plug into water or other liquids.
4. To prevent electrical shock, do not use the vacuum cleaner outdoors or on wet surfaces.
5. Always check the power cord before use, the power cord and the plug should be in a good condition and must not be damaged. If the power supply cord is damaged or defective, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
6. The appliance and charging base are intended for domestic indoors use only.
7. Do not unplug by pulling on the power cord. To unplug, grasp the plug, not the power cord. Use only Australian and New Zealand electrical safety approved extension cords.
8. Do not pull or carry the appliance by the power cable, use the power cable as a handle or pull the power cable around sharp edges or corners. Avoid running the appliance over the power cable.
9. Do not handle or operate the appliance with wet hands and follow electrical safety precautions at all times.
10. Extreme caution should be exercised when using the appliance on stairs.
11. Do not attempt to change the attachments while the appliance is switched on. Use only manufacturer's recommended accessories.
12. Do not operate the vacuum cleaner too close to heaters, radiators and other hot surfaces.
13. Do not use the appliance to pick up flammable items or combustible liquids (i.e. gasoline, hot ashes, cigarettes, matches, explosive materials or anything burning) or use in areas where such substances and items may be present.

14. Do not use the appliance to pick up toxic materials (i.e. chlorine bleach, ammonia).
15. Never operate or use the appliance without the filters in place.
16. Before vacuuming, remove any large or sharp objects from the floor or cleaning surface in order to prevent damage to the filter.
17. If the air inlet or floor head is blocked, switch off the cleaner straight away. First, clear the blocked object before attempting to start the vacuum cleaner again.
18. Before carrying out any maintenance service or cleaning the filters, always switch off the vacuum cleaner.
19. Keep openings away from your face and body.
20. Do not use the vacuum cleaner if it is damaged or broken. If connection cables are damaged, have them replaced immediately.
21. Never clean the vacuum cleaner or any of the electrical parts, especially the electrical connections with water or liquid cleaners.
22. Never attempt to make any modifications electrically to the vacuum cleaner and charging base.
23. Always store the appliance and charger indoors in a cool and dry place.
24. Do not pick up water, for dry household use only.
25. Use the electric power head only for vacuuming dust and dry substances in the home.
26. Never run over the power cable with the power head as this may cause damage to the power cable.
27. Never touch the roller brush while the vacuum cleaner is switched on.
28. To prevent unnecessary wear on the power head, keep it moving while in operation.
29. Damage caused by improper use or by not observing the instructions in this manual will void the warranty.

Battery use and care

1. The appliance is only to be used with the charger uniquely provided with the appliance.
2. Only charge the battery inside the product and only use the specifically designated charger to charge the product.
3. When appliance is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects that can make a connection from one terminal to another. Shorting the appliance terminals together may cause burns or a fire.
4. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
5. Do not charge or store the appliance outdoors or inside the car. Only charge or store the battery in a dry indoor area where the temperature is more than 5°C but less than 45°C. The charger is for indoor use only.
6. Never attempt to open the battery for any reason. If the plastic housing of the battery casing breaks or cracks, immediately discontinue use and do not recharge.
7. The charger is not a serviceable part.
8. Before disposal of your battery, fully discharge your battery by running the product until it stops.
9. The cleaner contains a Li-Ion battery. Do not dispose the appliance with your local garbage. Contact your local council for instructions on how to safely dispose of the battery.
10. Do not use the charger to charge a non-chargeable battery.

Assembly

IMPORTANT! Always remove the battery from the appliance before fitting or removing accessories.



Installing the Battery

1. Align the sliding slot of the battery with the guide rail on the machine body.
2. Insert the battery into the machine (as shown) until a “click” sound is heard.



Connecting the Swivel Powerhead

Insert the Swivel Powerhead into the rod. You will hear a “click” sound when it is securely in place.

Assembly (continued)



Connecting the rod to the unit

During installation of the rod, insert the plug end into the air inlet of the cleaner. Once securely in place, you will hear a “click” sound.



Connecting accessories to the unit

When inserting accessories into the cleaner you will hear a “click” sound when it is securely in place.

To disassemble, press the rod release button on the cleaner and then pull the accessory out from the air inlet.

Instructions for Use



Continuous Mode

1. To enable Continuous Mode, turn the switch towards the handle until it 'clicks' into place.
2. To disable Continuous Mode, push the switch away from the handle until it 'clicks' into place.

Attention:

After each use, please ensure that the Continuous Mode switch is disabled. Failure to do so may cause battery failure.

It is recommended to charge your product after each use to maintain maximum performance.

Accessories

2-in-1 Cleaning Tool



2-in-1 Cleaning Tool

The 2-in-1 Cleaning Tool can be used as a soft dusting brush for cleaning a variety of surfaces or as an upholstery tool for cleaning furniture.

Crevice Tool



Crevice Tool

The Crevice Tool can be used to clean in between hard to reach places or in tight spaces.



Carpet



Hard Floors

Swivel Powerhead

Ideal for daily cleaning on carpets and hard floors.

NOTE: If the Swivel Powerhead is blocked, the motor switches off automatically. If this occurs, switch off the vacuum cleaner and remove the battery. Remove any object that has blocked the Swivel Powerhead, and switch on again. If the Swivel Powerhead does not start again after cleaning, do not try to dismantle the Swivel Powerhead. Please contact your local Godfreys store.

Maintenance



Charging the vacuum cleaner

Insert the charger into the charging port on the vacuum cleaner. When the charging indicator light is flashing red, the vacuum cleaner is being charged.

When the charging indicator light turns from red to green, the vacuum cleaner battery is fully charged.

When the charging indicator light is flashing in between red and green intermittently, the battery has not been inserted correct. Please make sure the battery is clicked into place.

NOTE: Product needs to be charged for 5-6 hours although during the first three applications of use, twelve hours of continuous charging is required.

NOTE: When the charging indicator light is flashing red during use, it means the battery is running low and requires charging.

CAUTION! Do not try to open the battery and repair it yourself.

NOTE: As a safety precaution, the vacuum cannot be switched on while the vacuum is charging.



Storage

1. Remove the extension rod and place the cleaner onto the wall storage bracket.
2. Place the rod and accessories into the corresponding hooks.

Note: If you are not going to use the machine for a long period of time, please remove the battery from the machine to maintain the battery life.

Maintenance (continued)

IMPORTANT! Turn off the cleaner and remove the battery before conducting any maintenance tasks. It is recommended to clean the dust canister after each use or when dust reaches the max fill line.



Emptying the Dust Canister

Press the Dust Bin Lid Release button to open the bottom cover of the vacuum to empty the dust canister.



Cleaning the Dust Canister and Filters

1. Press the Dust Bin Release button, while also pulling the canister away in a downward and outward direction.
2. To remove the mesh filter, turn the filter clockwise to unlock and release the filter.





3. To remove the cyclone separator, turn the cyclone separator anticlockwise to unlock and release the separator.



4. To remove the exhaust filter, press the Exhaust Filter Release button and remove it from the cleaner. Then, pull the filter out from the filter holder.
5. The filters can be washed by washing under lukewarm water. Dried for at least 24 hours before it can be reinstalled.

Note: *The exhaust filter is recommended to be replaced every 6 months.*



Cleaning the Roller Brush

1. Slide the Roller Brush Release button in the direction of the arrow shown on the button.
2. At the same time, gently pull out the roller brush as shown, and clean as required.



Spare Parts

Please contact Godfreys Customer Care: 1800 815 270, NZ: 0800 282 288 to find your local spare parts provider.

Part	Part Number
Exhaust Filter	32201730
Battery	33201770
Dust Bin	33156293
Agitator	33788071
Powerhead	31155563
Charger Adaptor	33201771

Troubleshooting

Problems and solutions

If you come across a problem, please use the checklist of troubleshooting tips before contacting Godfreys Customer Care.

Fault	Cause	Solution
Cleaner doesn't start	Flat battery	Charge the vacuum cleaner
Reduced suction	The dust canister is full of dust	Empty the dust canister
	Filter is blocked	Clean or replace the filter
	The air way is blocked	Clear the air way
The charging indicator light fails to turn red during charging ("red" indicates the status of charging)	The cleaner is not fully inserted to the charger	Remove the cleaner from the charger and reinsert the cleaner to the charger again
	The charger is not connected to mains power	Connect the charger to the mains power
Insufficient application time after charging	Insufficient charging time	Fully charge the battery according to the instruction described in the charging section
	Normal discharge reduction in battery	Purchase a new battery
Light flashes from red to green intermittently.	Battery is not inserted/clicked into the machine properly.	Check to make sure the battery has clicked into the machine. Take the battery out and reinsert into the machine until you hear it click in.



ULTRA LIGHT PLUS

CORDLESS STICK VACUUM

Conditions of warranty

Your cleaner, in the case of domestic use, has a two year parts and labour warranty against product defects and failures when the product is used in accordance with the terms and conditions of this warranty statement. Two year warranty on parts and labour excluding the battery which has a one year warranty.

This warranty commences from the original date of purchase and is not transferable; please retain your original proof of purchase for any warranty claims. This warranty is valid only in the country where the cleaner is purchased.

The cleaner must be operated in accordance with these instructions and used only for domestic household cleaning to remove DRY dirt and dust from household carpets, flooring and fabrics. This cleaner is not fit to be used as an industrial cleaner, and is not designed for the collection of vitreous building material including particle board, construction products and similar products such as wood/fibres, cement, fillers, fibre glass etc or excessive or frequent sand. The infrequent pick-up of these materials in these circumstances may be harmful to your cleaner and may void the manufacturer's warranty.

Accessories and consumables including dust bags and filters, unless defective in manufacture, are not subject to this warranty. In order to prolong the life of accessories and consumables, regular care and maintenance is recommended.

When properly used and cared for, your cleaner will render excellent service; refer to the instruction manual for further details, as misuse or failure to follow the instructions makes this warranty void.

In the event of service or advice being needed, please contact Electrical Home-Aids Pty Ltd, Level 1, Building 3, Brandon Business Park, 530 Springvale Road, Glen Waverley Victoria 3150, or on 1800 815 270 (AUS) or 0800 282 288 (NZ), Monday-Friday 9am-5pm EST. The decision to repair or replace the cleaner is at the sole discretion of Electrical Home-Aids Pty Ltd. If Electrical Home-Aids Pty Ltd decide to repair or replace the cleaner, it will do so at its own cost.

Electrical Home-Aids Pty Ltd is unable to accept responsibility under this warranty for any repair work not carried out by an authorised Service Agent or from the use of non-genuine parts. If any part is no longer available or manufactured, Electrical Home-Aids Pty Ltd will replace it with a genuine functional replacement part. This warranty does not apply to the cost of replacing any parts of the product due to normal wear and tear, alterations, improper installation, physical abuse, misuse or accidental damage. Any transportation costs involved in the repair of defective parts shall be borne by the claimant.

If proof of purchase cannot be provided at the time of a warranty claim or service, any work carried out on the cleaner is chargeable.

The repair of the cleaner under this warranty does not extend the original period of warranty.

The benefits conferred by this warranty are in addition to all other rights and remedies in respect of the product as outlined under the Competition and Consumer Act and other State and Territory laws.

"Our goods come with guarantees that cannot be excluded in the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure."



**Call Godfreys Customer Care
with any product queries**

Australia 1800 815 270
New Zealand 0800 282 288

To find out more about our range,
visit: www.godfreys.com.au
www.godfreys.co.nz
email: customerservice@godfreys.com.au