

# tineco

**PURE ONE X SERIES**  
Smart Vacuum Cleaner

Instruction Manual



\*Actual product may differ from illustration.



# CONTENTS

Important Safety Instructions.....	3
Overview.....	6
Product Components.....	7
Accessories.....	8
Assembly.....	9
Operation.....	11
Maintenance.....	16
Specifications.....	20
Troubleshooting.....	21
Warranty.....	22

# Precautionary measures:



1. **Do not** operate the vacuum cleaner too close to heaters, radiators or other hot surfaces.



2. Before inserting the plug into the wall, make sure your hands are dry.



3. Before turning on the vacuum cleaner, safely remove any large objects from the floor or cleaning surface in order to prevent damage to the filter.



4. When you want to remove the plug from the power socket, **do not** use the power cable, gently pull the plug from the power socket.



5. **Do not** use this vacuum cleaner to pick-up water or liquids.

**Do not use this vacuum cleaner if the battery pack housing and/or the charger housing is damaged.**

# Important Safety Instructions

***IMPORTANT! Always switch off the cleaner before cleaning, when not in use or attempting any maintenance task. The charger must only be connected to an AC power supply at the voltage shown on the rating label. This cleaner should only be used for its intended purpose as described in this instruction manual. Never operate the cleaner without filters.***

When using your vacuum cleaner, basic precautions should always be observed, including the following;

 
1. This appliance is not intended for use by persons (including children) with reduced physical, sensory, mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they **do not** play with the appliance.
3. To prevent electrical shock, **do not** immerse the appliance, battery or power plug into water or other liquids.
4. To prevent electrical shock, **do not** use the vacuum cleaner outdoors or on wet surfaces.
5. Always check the power cord before use, the power cord and the power adapter should be in a good condition and **must not** be damaged. If the power cord or the charger adaptor is damaged or defective, it must be replaced.
6. The appliance and charger are intended for domestic indoors use only.
7. **Do not** unplug the charger by pulling on the power cord. To unplug, grasp the power adapter, not the power cord and gently pull the power adapter from the power socket.
8. **Do not** handle or operate the appliance with wet hands. Follow electrical safety precautions at all times.
9. **Do not** attempt to change the attachments while the appliance is switched on. Use only manufacturer's recommended accessories.
10. **Do not** operate the vacuum cleaner too close to heaters, radiators and other hot surfaces.
11. **Do not** use the appliance to pick up flammable items or combustible liquids (i.e. gasoline, hot ashes, cigarettes, matches, explosive materials or anything burning) or use in areas where such substances and items may be present.
12. **Do not** use the appliance to pick up toxic materials (i.e. chlorine, bleach, ammonia).
13. **Never** operate or use the appliance without the filters in place.

14. Before vacuuming, remove any large or sharp objects from the floor or cleaning surface in order to prevent damage to the filter.
15. If the air inlet or floor head is blocked, switch off the cleaner straight away. Clear the blocked object before attempting to start the vacuum cleaner again.
16. Before carrying out any maintenance or cleaning the filters, always switch off the vacuum cleaner.
17. Keep openings away from your face and body.
18. **Do not** use the vacuum cleaner if it is damaged or broken. If connection cables are damaged, have them replaced immediately.
19. **Never** clean the vacuum cleaner or any of the electrical parts, especially the electrical connections with water or liquid cleaners.
20. **Never** attempt to make any modifications to the vacuum cleaner and charger.
21. Always store the appliance, battery and charger indoors in a cool and dry place.
22. **Do not** use the vacuum to pick up water or liquids. This cleaner is for dry household use only.
23. Use the electric power head only for vacuuming dust and dry substances in the home.
24. **Never** run over the power cable with the power head, as this may cause damage to the power cable.
25. Keep your hands away from the roller brush while the vacuum cleaner is switched on.
26. To prevent unnecessary wear on the power head, keep it moving while in operation.
27. Damage caused by improper use or by not observing the instructions in this manual will void the warranty.

# Battery use and care

1. The appliance is only to be used with the charger provided with the appliance.
2. Only charge the battery inside the cleaner or the charging dock. Only use the specifically designated charger to charge the product.
3. When the appliance is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects that can make a connection from one terminal to another. Shorting the appliance terminals together may cause burns or a fire.
4. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact occurs, flush with water immediately. If liquid comes into contact with your eyes, seek medical help immediately.
5. **Do not** charge or store the appliance outdoors or inside the car. Only charge or store the battery in a dry indoor area where the temperature is more than 4 deg C but less than 40 deg C. The charger is for indoor use only.
6. **Never** attempt to open the battery pack for any reason. If the plastic housing of the battery casing breaks or cracks, immediately discontinue use and **do not** recharge.
7. The charger is **not** a serviceable part.
8. Before disposal of your battery, fully discharge your battery by running the product until it stops.
9. The cleaner contains a Lithium ion battery. **Do not** dispose the appliance with your local garbage. Contact your local council for instructions on how to safely dispose of the battery.
10. **Do not** use the charger to charge a non-chargeable battery.

# Overview

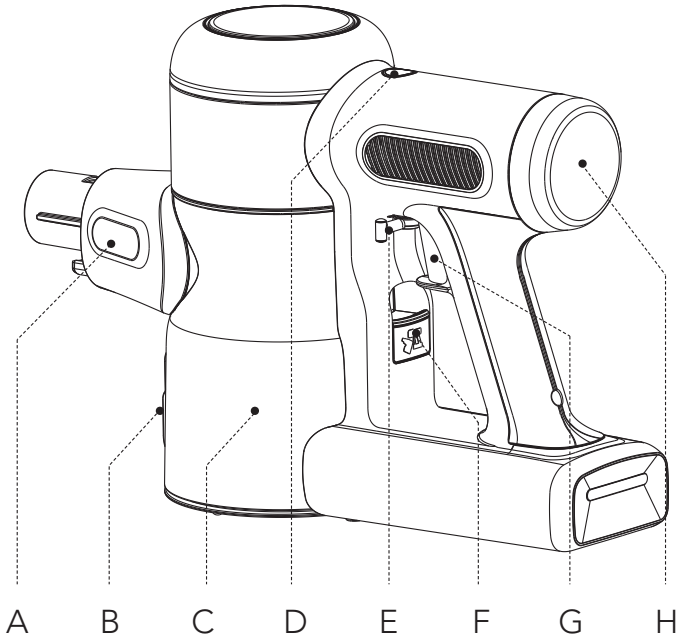

A. Dust sensor

B. Dust empty release button

C. Dustbin

D. AUTO/MAX button

E. Trigger lock

 
 








F. Dustbin release button

G. Trigger

 H. HEPA Filter



# Product Components

 
	Item	PURE ONE X
	Main body	<input type="radio"/>
	Tube	<input type="radio"/>
	Full-size LED multi-tasker power brush	<input type="radio"/>
	Mini power brush	<input type="radio"/>
	2-in-1 dusting brush	<input type="radio"/>
	Crevice tool	<input type="radio"/>
	Pre-filter cleaning tool + Spare pre-filter	<input type="radio"/>
	Wall-mounted dock	<input type="radio"/>
	Adaptor	<input type="radio"/>
	Hair cleaning tool	<input type="radio"/>

• Actual accessories may vary from shown or change without notice.  
Available accessories may vary by market.

# Accessories

## Note:


- Test an accessory on a small, inconspicuous area before use on sensitive surfaces.
- The “Product Components” page shows which accessories are included with your purchase.
- As shown below, there are many components compatible with this model. If you would like to purchase accessories or consumables, please contact Customer Service on **AUS: 1800 815 270, NZ: 0800 282 288**.

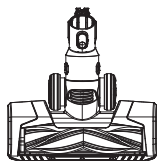

### Full-size LED multi-tasker power brush

Ideal for both hard floors and carpets.

 
Very effective for dislodging dirt embedded in the carpet.

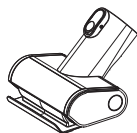

### Mini power brush


For vacuuming upholstered furniture, mattresses, etc.

 Vacuums pet hair and removes ingrained dirt.

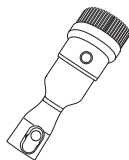


### 2-in-1 dusting brush

 Switches between a wide and a soft brush by pressing the release button. The soft brush is most effective on hard-surface furniture while the wide brush is effective for upholstered furniture, curtains, etc.

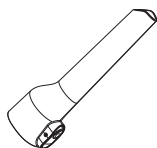

### Crevice tool

 For corners, nooks, and other hard-to-reach places such as around car seats, picture frames, and cupboards.

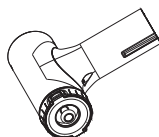

### Pre-filter cleaning tool

A dirty filter is a leading cause of suction loss, and this tool is designed to make your filter last much longer. Place the dirty filter inside the pre-filter cleaning tool and close the lid. Run the appliance in MAX mode, and rotate the side cover.



 
### Hair cleaning tool

Use the end with the small blade to remove hair and debris wrapped around the roller.


Use the end with the brush to clean the brush window, and the dustbin, as required.

# Assembly

## Tube Installation

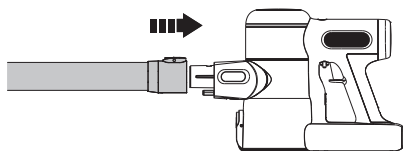


Insert tube.

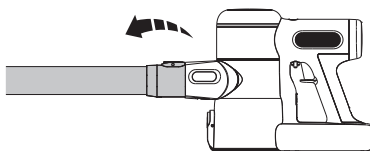 


Press the release button to remove the tube.

## Brush Installation

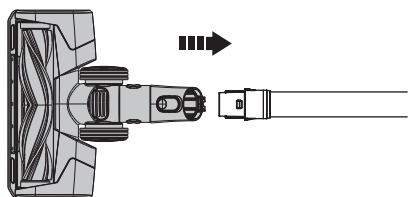 


Insert the power brush.

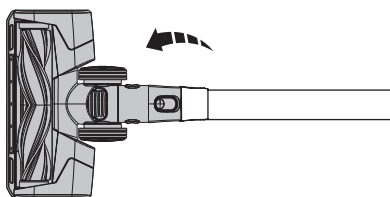 


Press the release button to remove the power brush.

## Dustbin Installation

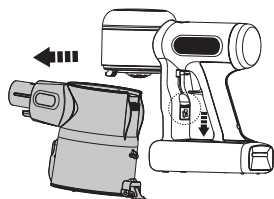 


 To clean the dustbin more thoroughly, press the dustbin release button to detach from the appliance.

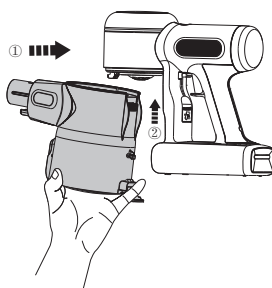

When re-attaching the dustbin, hold on an angle and slot the top of the dustbin into the hook on the main body. Push upwards until the hook is fixed into the slot on the dustbin and then it clicks back into place.


## Wall-mounted Dock Installation

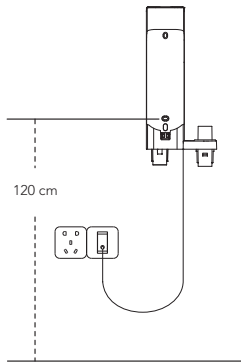 

Determine the best wall location for mounting the dock. We recommend placing it 120cm from the lower screw hole to the floor (may need to be adjusted based on the actual situation).

### **Warning:**

 - Ensure the wall surrounding the mounting area is free of gas, water pipes, electrical cables and wires.
- To avoid the dock falling, ensure it is firmly installed.

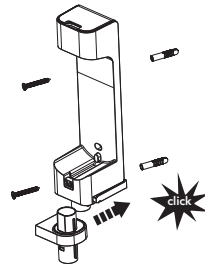


Assemble the two bracket components, with a “click” to signify correct assembly. Once this is complete, use the screws provided by Tineco to affix the dock to the wall.

# Operation

 
## Preparing for Use

### Note:

- Before the first use, please charge the appliance (see "Charging the Battery") for 3-4 hours in an area where the ambient temperature is between 4°C (39.2°F) and 40°C (104°F).
- Select an accessory and attach it to the appliance before use (see "Accessories").

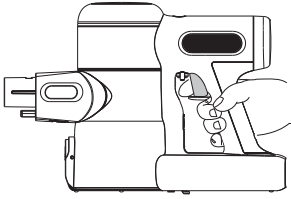


 Pull the trigger to activate the suction.

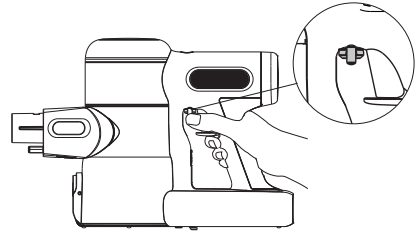


Pull the trigger lock to hold the trigger for continuous power mode.

 - Place the appliance on the wall-mounted dock for convenient storage and recharging after use.

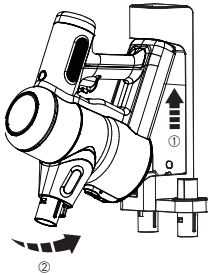

Place the main body on the dock.

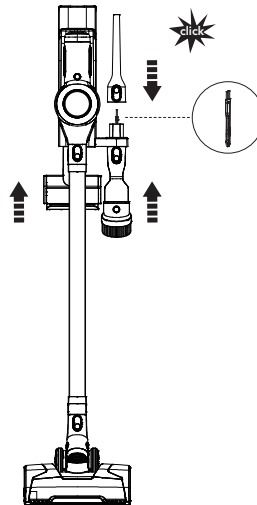 


To avoid bristle damage, always place attachments on the dock after use.

# Cleaning Mode Selection

 
## AUTO Mode

- In AUTO mode, the indicator color changes according to the amount of dust detected. When blinking red indicates dust is detected, the brighter red light indicates more dust, whereas blinking blue indicates no dust is detected. This mode automatically provides the best cleaning solution.

To enter AUTO mode:

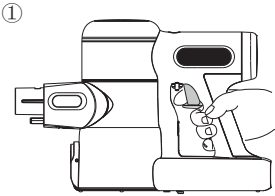


 The default setting on startup is AUTO. The appliance then takes 3 seconds to initially detect blockages or dust. If no dust is detected, power is reduced to conserve energy.

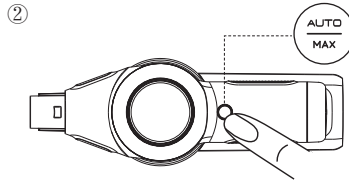

When in MAX mode, press the AUTO/MAX button to enter AUTO mode.


## MAX Mode

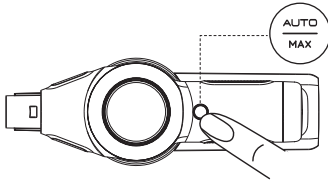 


In AUTO mode, press the AUTO/MAX button to enter MAX mode.

## APP

 - All the functions can be performed using the Tineco app. Download the Tineco app from the App Store, Google Play and Tineco Official Site.

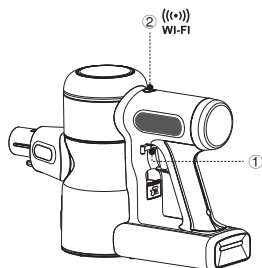

- ✓ iOS 9.0 or later (iPhone 5s and above)
- ✓ Android 5.0 or later

1. Pull the trigger to ensure the appliance battery has sufficient charge.
2. Long press  to activate WiFi connection (blinking blue light), follow the guide in App for more details.

## App Function Introduction



### Battery

Battery level in real time.



### Cleaning report

Displays the dust amount, working hours and working status.



### Suction adjustment

When in manual mode, swipe the phone screen to adjust suction power.



### Reminder of filter status

Records the severity of the dirty filter and provides a cleaning reminder as required.



### Contact us

 
You can contact the Customer Service about any problems during the working hours.




### Feedback

If you have any comments, please send us your feedback.

## Emptying the Dustbin

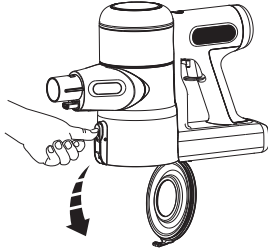


 Press the release button on the side of the dustbin to empty the contents.

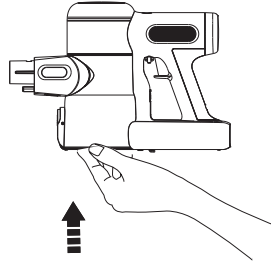

Close and click the dustbin flap back into place.

## Charging the Battery

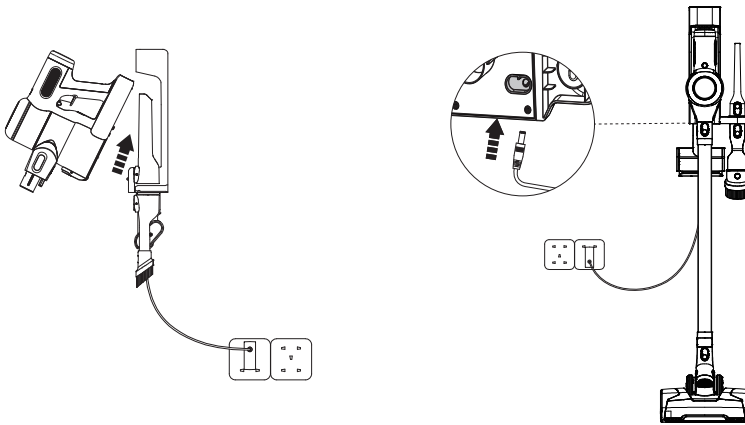 

Place the main body on the dock, plug in the adaptor and charging port. The main body indicator blinking blue indicates that it is charging correctly.

### **Warning:**

- Only use the Tineco-provided adaptor to charge the appliance.
- During long periods of not being used, store the appliance in a cool, dry place. Ensure the battery is fully charged every 3 months.
- Do not expose appliance to sunlight or freezing temperature. Recommended temperature range: 4°C (39.2°F)~40°C (104°F).



# Runtime

- When in AUTO mode, the runtime is approximately 70 minutes. When MAX power is used, the runtime is approximately 12 minutes.
- Estimated runtime data was obtained by a Tineco Laboratory using one battery and non-motorized accessories.

# Charging Time

- A full charge takes approximately 3-4 hours.
- Estimated data was obtained by a Tineco Laboratory using ambient temperatures between 4°C (39.2°F) to 40°C (104°F).

# Indicator

## When in Use



Slowly blinking red light:

- First blinking for 3 times: low power reminding
- Second blinking: no power, please charge



Rapidly blinking red light: see troubleshooting.

## Connect to Network



Blinking blue light: Connecting to the network.



Solid blue light: Successfully connected.

## During Charging



Breathing blue light: charging.

## Fully Charged



In 5 minutes: solid blue light.



 
After 5 minutes: light off.

# Maintenance


## Note:

- Clean the dustbin and filters after each use.
- Use the cleaning tool to thoroughly clean the pre-filter when the indicator blinking red rapidly. To maintain high performance, wash and dry the pre-filter monthly, replacing it every 6 months. Wash and dry the HEPA filter every 3 months, replacing it every 12 months.


## Dustbin and Mesh Filter

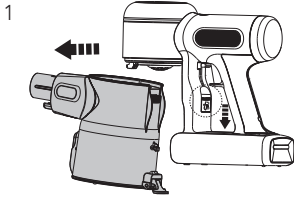

 
Press the dustbin release button to remove the dustbin.

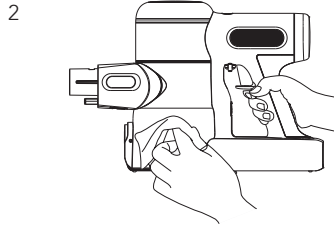

 
Clean with a damp cloth, taking care to prevent water entering the appliance main body and battery.

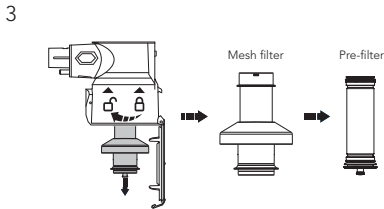

 
Turn counter-clockwise to remove the filters.

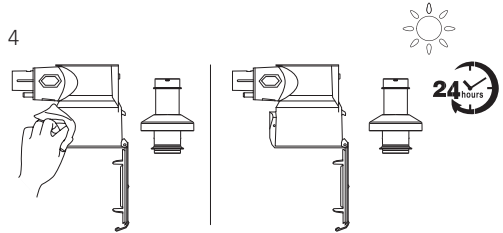

 Clean the dustbin and mesh filter with a damp cloth. Air dry completely before reinstalling.

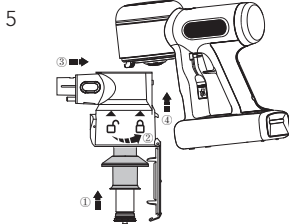

 
After cleaning, insert the clean pre-filter into the mesh filter properly and it clicks into place. Install the clean filter and dustbin back into the main body, then close the dustbin flap.

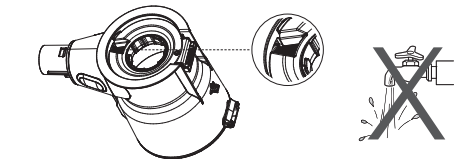


## Warning:

- Do not wash the dustbin as it contains a dust sensor. If it comes into contact with water, please dry it with a hair dryer.

 
## Pre-filter

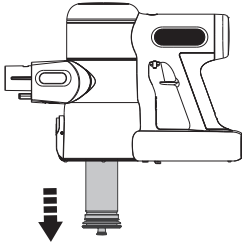

 
Ensure the appliance is switched off before cleaning, and remove the dirty pre-filter from the mesh filter-holder.

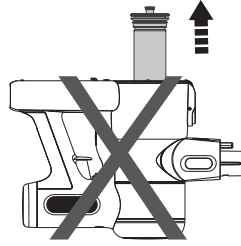

 Do not turn the appliance upside down when removing or installing the filter to prevent dust from entering the motor.

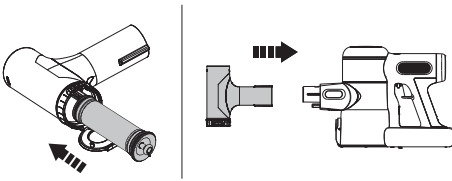


 Replace a clean filter to the main body. Put the dirty pre-filter into the cleaning tool and connect the cleaning tool to the main body.

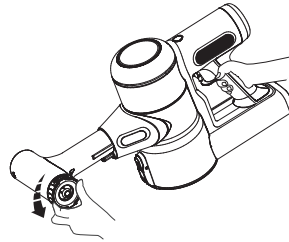


Run the appliance in MAX mode, and rotate the side cover to clean the dirty pre-filter.


## HEPA Filter

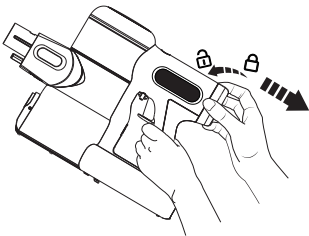 

 
Turn the HEPA to the left and gently pull out for cleaning. Do not use the appliance without first installing the HEPA filter.

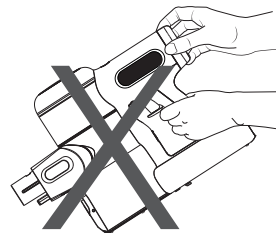

 Do not place the appliance as above when removing or installing the HEPA filter, to prevent dust from entering the motor.

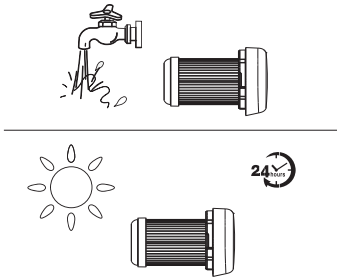


 The HEPA filter can be washed under running water and must be completely dry before reinstalling.

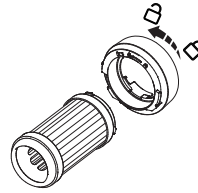


\* The HEPA is detachable. Simply rotate to remove and replace.

## Dust Sensor

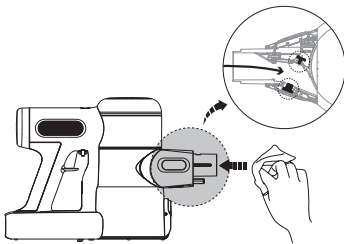 


To avoid dust accumulation which can affect cleaning performance, wipe the suction mouth with a damp cloth.


## Mini Power Brush

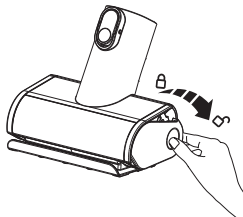 

 
Press against the roller end cover downward.

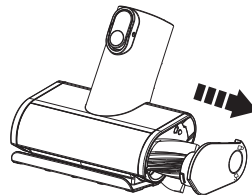

Pull out the brush roller.

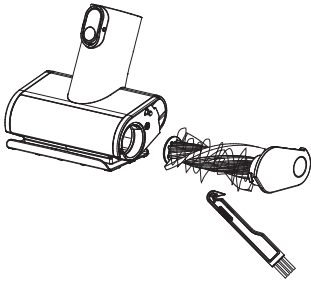 


 Remove the debris wrapped around the roller with the Tineco Hair Cleaning Tool.

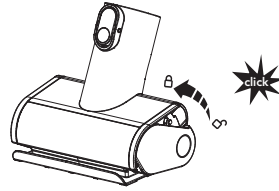


Fully reinsert the brush roller at an angle and push upward until it clicks securely back into place.


## Brush Roller

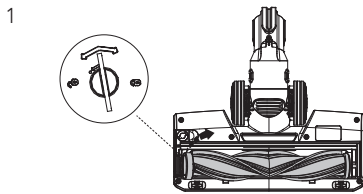 

 
Use a coin or other tool, to unlock the brush roller lock, then remove the brush from the brush window.

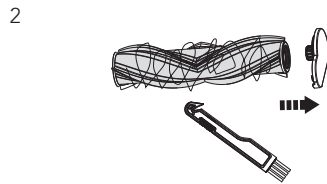

 Remove the debris wrapped around the roller with the Tineco Hair Cleaning Tool.

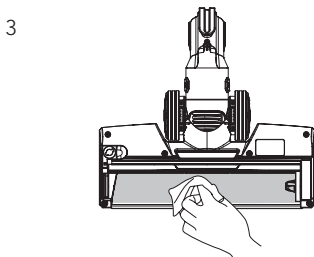

 Gently clean the transparent brush window.

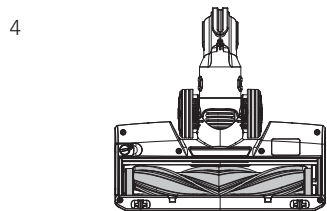

After cleaning, reinstall the brush.


### **Warning:**

- The power brush contains electrical components which must not be soaked or washed with water.







# Specifications

Product	PURE ONE X SERIES
Voltage	21.6V DC
Rated Power	260W
Dustbin Capacity	0.4L
Charging Time	3-4 hrs
AC Input	100-240V~

## Disposal

- The battery contains materials that are harmful to the environment and must be removed from the appliance before it is discarded.
- When removing the battery, the appliance must be powered off.
- Batteries, chargers, accessories and packaging should be sorted for environmental friendly recycling. Do not put them into fire, water or soil. Do not dispose of batteries and chargers into household waste! 
- If battery leakage contacts skin or clothing, immediately flush with water to avoid irritation and seek medical help.

# Troubleshooting

Problem	Possible cause	Solution
The appliance does not turn on	No power	Charge the battery
	Auto protection for overheating	Restart after cooling down
	The appliance is blocked (i.e. the tube, suction mouth or some other parts)	Check and remove blockages
Weak suction power	Dustbin and filters are full	Clean the dustbin and filters
	The pre-filter is not installed	Install the pre-filter
	The appliance is blocked (i.e. the tube, suction mouth or some other parts)	Remove blockages
	The brush roller tangled with hairs or fibers	Clean the brush roller
Rapidly blinking red for 6s then off during charging 	Charging error	Check if the adaptor is in good condition
	The adaptor is not designed for this appliance	Use the original adaptor
Rapidly blinking red and shut down 	Air channel completely blocked	Remove blockages
Rapidly blinking red 	Brush roller tangled	Clean the brush roller
	Air channel partly blocked	Remove blockages
Solid red during use 	Dust sensor blocked	Remove blockages
	Dustbin not installed properly	Install the dustbin properly
Appliance shut down during use 	Battery is overheated	Restart after cooling down
Slowly blinking red 	First blinking for 3 times: low power reminding	Charge the battery
	Second blinking: no power	
Battery won't charge	The adaptor is not correctly inserted	Reinsert the adaptor correctly
	The adaptor is not designed for this appliance	Use the original adaptor
Abnormal motor sounds	The appliance is blocked (i.e. the tube, suction mouth or some other parts)	Remove blockages

## Note:

If the above troubleshooting guide fails to provide a solution, please contact Customer Service on [customerservice@godfreys.com.au](mailto:customerservice@godfreys.com.au) / [customerservice@godfreys.co.nz](mailto:customerservice@godfreys.co.nz) or visit our website [www.godfreys.com.au](http://www.godfreys.com.au) / [www.godfreys.co.nz](http://www.godfreys.co.nz) for further support.

# Warranty



Your cleaner, in the case of domestic use, has a two year parts and labour warranty against product defects and failures when the product is used in accordance with the terms and conditions of this warranty statement.

This warranty commences from the original date of purchase and is not transferable; please retain your original proof of purchase for any warranty claims. This warranty is valid only in the country where the cleaner is purchased.

The cleaner must be operated in accordance with these instructions and used only for domestic household cleaning to remove DRY dirt and dust from household carpets, flooring and fabrics. This cleaner is not fit to be used as an industrial cleaner, and is not designed for the collection of vitreous building material including particle board, construction products and similar products such as wood/fibres, cement, fillers, fibre glass etc or excessive or frequent sand. The infrequent pick-up of these materials in these circumstances may be harmful to your cleaner and may void the manufacturer's warranty.

Accessories and consumables including dust bags and filters, unless defective in manufacture are not subject to this warranty. In order to prolong the life of accessories and consumables, regular care and maintenance is recommended.

When properly used and cared for, your cleaner will render excellent service; refer to the instruction manual for further details, as misuse or failure to follow the instructions makes this warranty void.

In the event of service or advice being needed, please contact Electrical Home-Aids Pty Ltd, Building 3, Level 1, Brandon Office Park, 530 Springvale Road, Glen Waverley Victoria 3150, on 1800 815 270 (AUS), 0800 282 288 (NZ), Monday-Friday 9am-5pm EST. The decision to repair or replace the cleaner is at the sole discretion of Electrical Home-Aids Pty Ltd. If Electrical Home-Aids Pty Ltd decide to repair or replace the cleaner, it will do so at its own cost.

Electrical Home-Aids Pty Ltd is unable to accept responsibility under this warranty for any repair work not carried out by an authorised Service Agent or from the use of non-genuine parts. If any part is no longer available or manufactured, Electrical Home-Aids Pty Ltd will replace it with a genuine functional replacement part. This warranty does not apply to the cost of replacing any parts of the product due to normal wear and tear, alterations, improper installation, physical abuse, misuse or accidental damage. Any transportation costs involved in the repair of defective parts shall be borne by the claimant.



If proof of purchase cannot be provided at the time of a warranty claim or service, any work carried out on the cleaner is chargeable. The repair of the cleaner under this warranty does not extend the original period of warranty.

The benefits conferred by this warranty are in addition to all other rights and remedies in respect of the product as outlined under the Competition and Consumer Act and other State and Territory laws.

“Our goods come with guarantees that cannot be excluded in the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.”

## REGISTRATION

We highly recommend that upon purchase, you register your appliance on the Tineco official website ([www.tineco.com](http://www.tineco.com)) and enjoy exclusive benefits. To register, please enter the last 11 digits of the serial number (found on the base of the main body).

Failure to register your product won't diminish your warranty rights.



**Call our Customer Service:**

AUS: 1800 815 270

NZ: 0800 282 288

**Or email our Customer Service:**

[customerservice@godfreys.com.au](mailto:customerservice@godfreys.com.au)

[customerservice@godfreys.co.nz](mailto:customerservice@godfreys.co.nz)

**Visit Official Website:**

[www.godfreys.com.au](http://www.godfreys.com.au)

[www.godfreys.co.nz](http://www.godfreys.co.nz)





**tineco**  
Live Easy.  
Enjoy Life.



tinecoglobal 

Tineco Official Site: [www.tineco.com](http://www.tineco.com)

Customer Support & Service Hotline

AUS: 1800 815 270

NZ: 0800 282 288

[www.godfreys.com.au](http://www.godfreys.com.au)

[www.godfreys.co.nz](http://www.godfreys.co.nz)

---

Distributed in Australia & New Zealand by Electrical Home-Aids Pty Ltd (Godfreys)  
Building 3, Brandon Office Park, 530 Springvale Road, Glen Waverley, VIC, 3150, Australia.